STEP 1

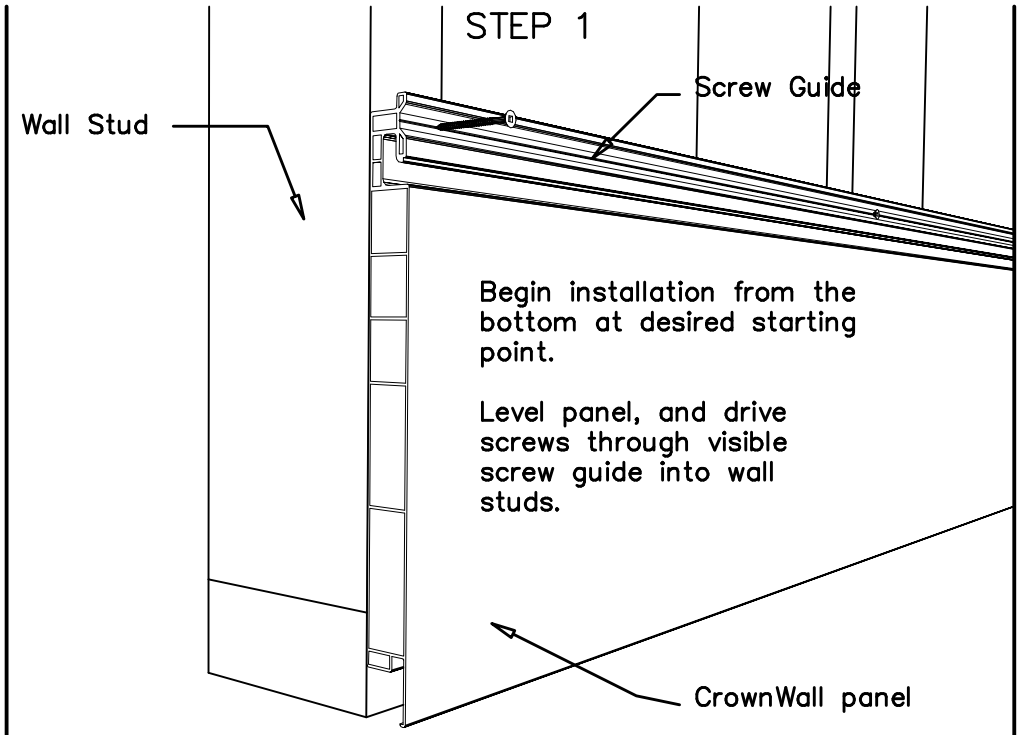

Begin installation from the bottom at desired starting point.

Level panel, and drive screws through visible screw guide into wall studs.

STEP 2

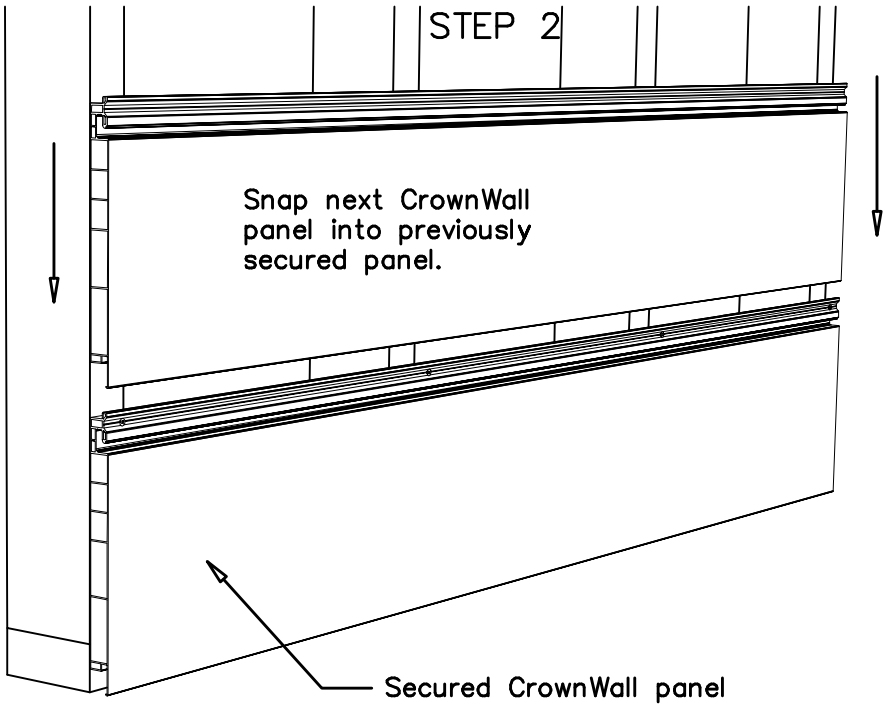

Snap next CrownWall panel into previously secured panel.

STEP 3

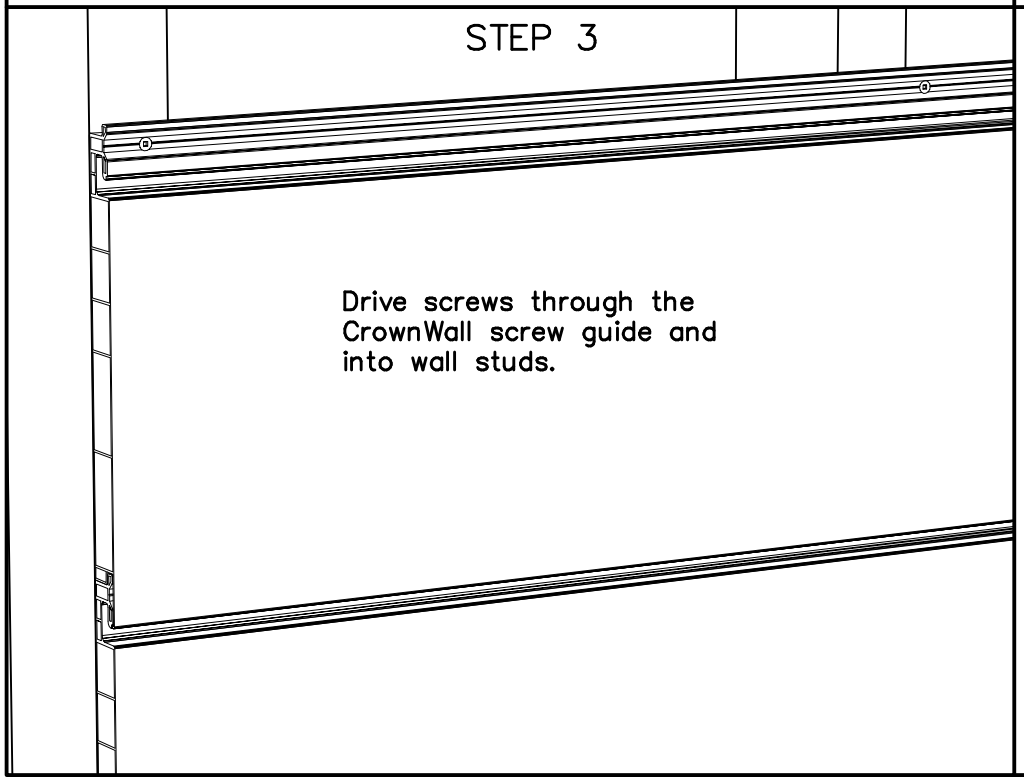

Drive screws through the CrownWall screw guide and into wall studs.

STEP 4

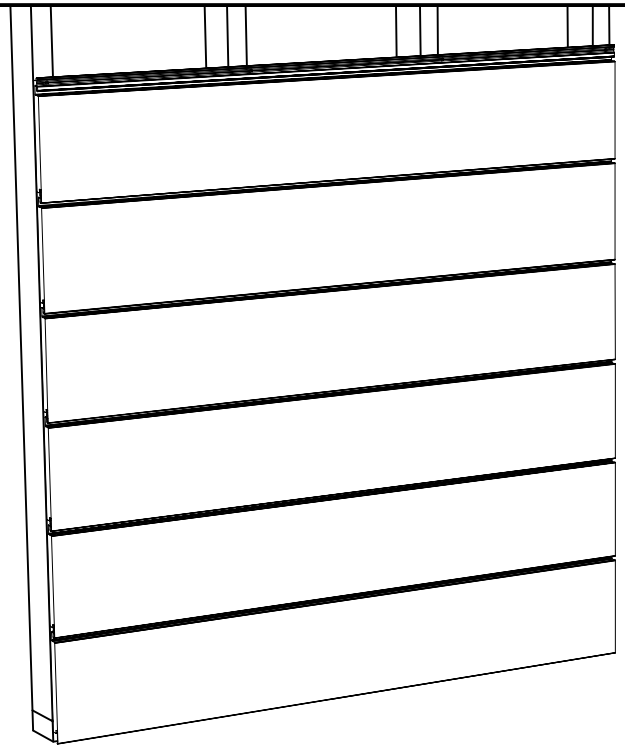

Continue installation of CrownWall panels as per steps 2 and 3.

Nail on plastic trim where required.